



UFP  
**EDGE™**  
Designed To Be Seen

# Timeless

## Nickel Gap Shiplap

- Primed and smooth pre-painted options
- Install on walls and ceilings
- 1x4, 1x6, 1x8 sizes with nickel gap reveal

Farmhouse White  
Cavalry Blue  
Midnight Black

Some colors may be special order

See reverse side for installation instructions.  
Show us your projects using #ufpEDGE



See more at [ufpEDGE.com/Timeless](https://ufpEDGE.com/Timeless)



# TIMELESS NICKEL GAP SHIPLAP INSTALLATION INSTRUCTIONS

Allow the wood to acclimate for several days prior to installation in the room in which it will be installed. Variances in temperature and moisture between the storage and application areas have a negative effect on the finished appearance if the product doesn't adjust to room conditions prior to installation. As wood dries a slight joint may open up. It is recommended to paint the surface behind the wood a dark color and paint any cut ends with touch up paint.

Fasten directly to the wall framing when installing in a horizontal orientation. For applications where vertical orientation is desired, full-length furring strips must be installed 24 inches on center when fastening shiplap. *Fasten shiplap using standard or painted trim nails (15 or 16 gauge). Fastener length should be long enough for 1 1/4"-1 1/2" of penetration into solid wood.*



On prefinished boards, apply a bead of high initial grab adhesive to the bottom of the board. Drive fastener into the top flange on each stud to secure. This will minimize the number of nail holes that need to be filled.

When installing shiplap over plaster or hardboard, the walls need to be in moderately good condition. Construction adhesive is usually the easiest and fastest way to install wood shiplap over drywall, plaster, hardboard and even old shiplap. When applying adhesive, be sure to follow the manufacturers instructions. To make sure you have a tight joint when applying adhesive, use trim nails to tack up and hold the shiplap in place on the drywall or plaster while the adhesive sets. Apply tack nails in the shiplap tongue every 24 inches.

To clean use mild soap and water. For touch up paint information and supplies, visit [ufpEDGE.com/timeless](http://ufpEDGE.com/timeless).

**DO NOT NAIL THROUGH  
OVERLAPPING PIECES**

**Install shiplap horizontally or vertically.**  
**For horizontal applications, start with the bottom course and work up with overlap pointing downward. Do not nail through overlaps. Shiplap siding is tight-fitting, so butt the courses up close.**

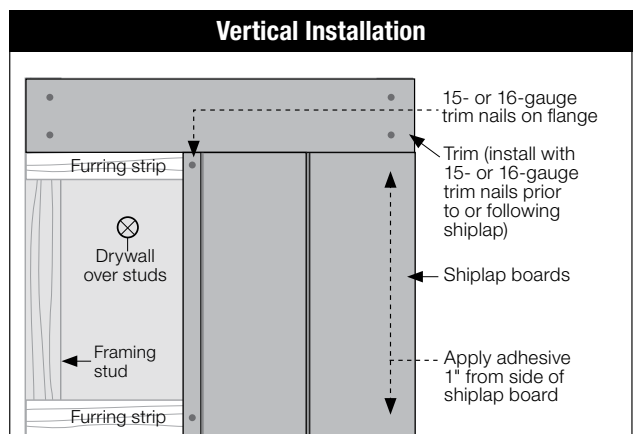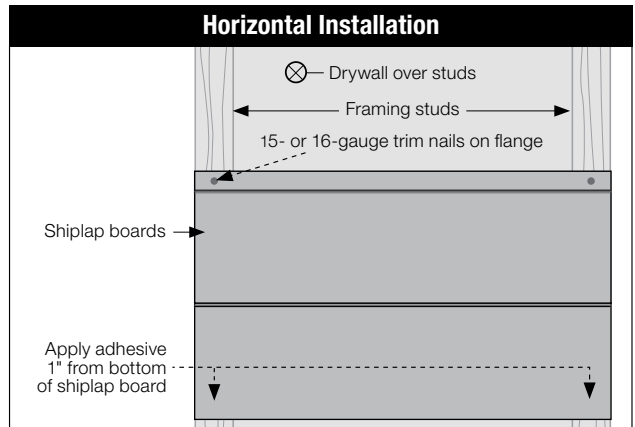

**THIS BROCHURE IS FOR ILLUSTRATION PURPOSES ONLY. USE OF THIS PRODUCT MUST BE IN ACCORDANCE WITH ALL LOCAL ZONING AND/OR BUILDING CODES. CONSUMER ASSUMES ALL RISKS AND LIABILITY ASSOCIATED WITH THE USE OF THIS PRODUCT. WARRANTOR DOES NOT PROVIDE ANY WARRANTY, EITHER EXPRESS OR IMPLIED, AND SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES.**



The Companies of  
**Universal Forest Products**

2801 East Beltline NE  
Grand Rapids, MI 49525  
800.598.9663  
[UFP.com](http://UFP.com)